



先勤科技股份有限公司

台北縣 234 永和市福和路 389 號 2 樓

2F., No. 389, Fuhe Rd., Yonghe City, Taipei County 234, Taiwan

Website : www.apro-tw.com

TEL : +886 2 2929 0389 / FAX : +886 2 2929 0307

E-mail : sales@apro-tw.com

INSTALL INSTRUCTION FOR DOS HOT SWAP

Applying to below card drives,

R312XX00I50XBH03R, 325XXI50XBH03R, R313XX00J50XBH03R, R323XX00J50XBH03R

Issued by 2008/4/23

Software information for Demonstration


Operation System	MS_DOS 6.22		
Drivers	pri_m.sys	Copy the file " pri_m.sys " into the booting disk when the card drive located at Primary Master .	Primary Master
	pri_s.sys	Copy the file " pri_s.sys " into the booting disk when the card drive located at Primary Slave .	Primary Slave
	sec_m.sys	Copy the file " sec_m.sys " into the booting disk when the card drive located at Secondary Master .	Secondary Master
	sec_s.sys	Copy the file " sec_s.sys " into the booting disk when the card drive located at Secondary Slave .	Secondary Slave

Notice: To edit "xxx_x.sys" in "config.sys" upon the file "xxx_x.sys" copied into the booting disk. (Please see Step 5.)

The Hardware information for Demonstration

Storage Device	WPCF01GS-D5SI-UF (APRO Industrial CF Card / 1GB / UDMA / Fixed Disk)
Adapter	AD-CF12VIDEX4003R (APRO IDE to CF card adapter / Vertical Type / 40pin)
Mother Board	GA-8VM800PMD-775
Hot Swap Device	R312XX00I50XBH03R (Install on IDE Secondary Master)


Installation steps
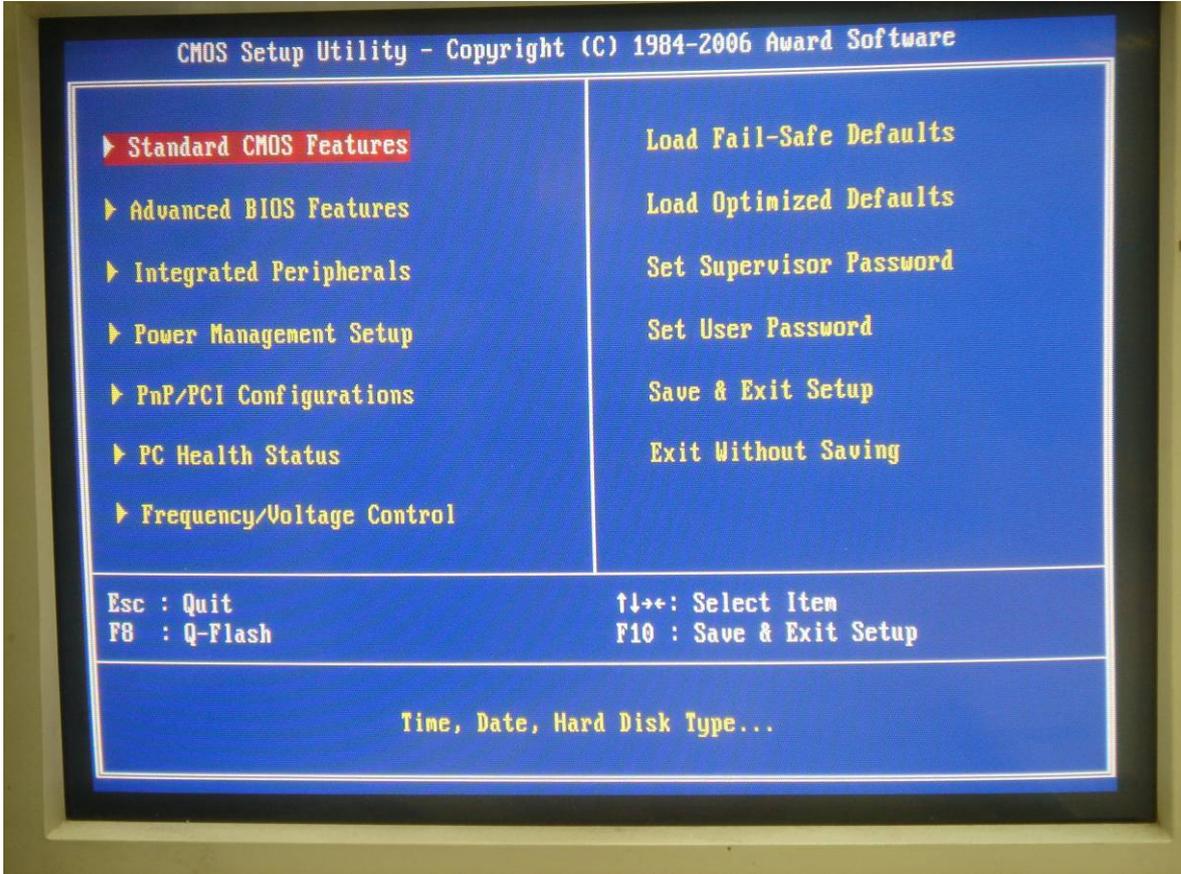
<p>Step 1.</p>	<p>Copy the file "xxx_x.sys" into the booting disk, depends on the location of card drive. (i.e., If the card drive located at Primary Master and then copy "pri_m.sys" into the booting disk)</p>
<p>Step 2.</p>	<p>Into "Standard CMOS Features" in BIOS.</p> 

Step 3.


Depends on the location of card drive,

If the card drive located at Primary Master and then into "IDE Channel 1 Master".

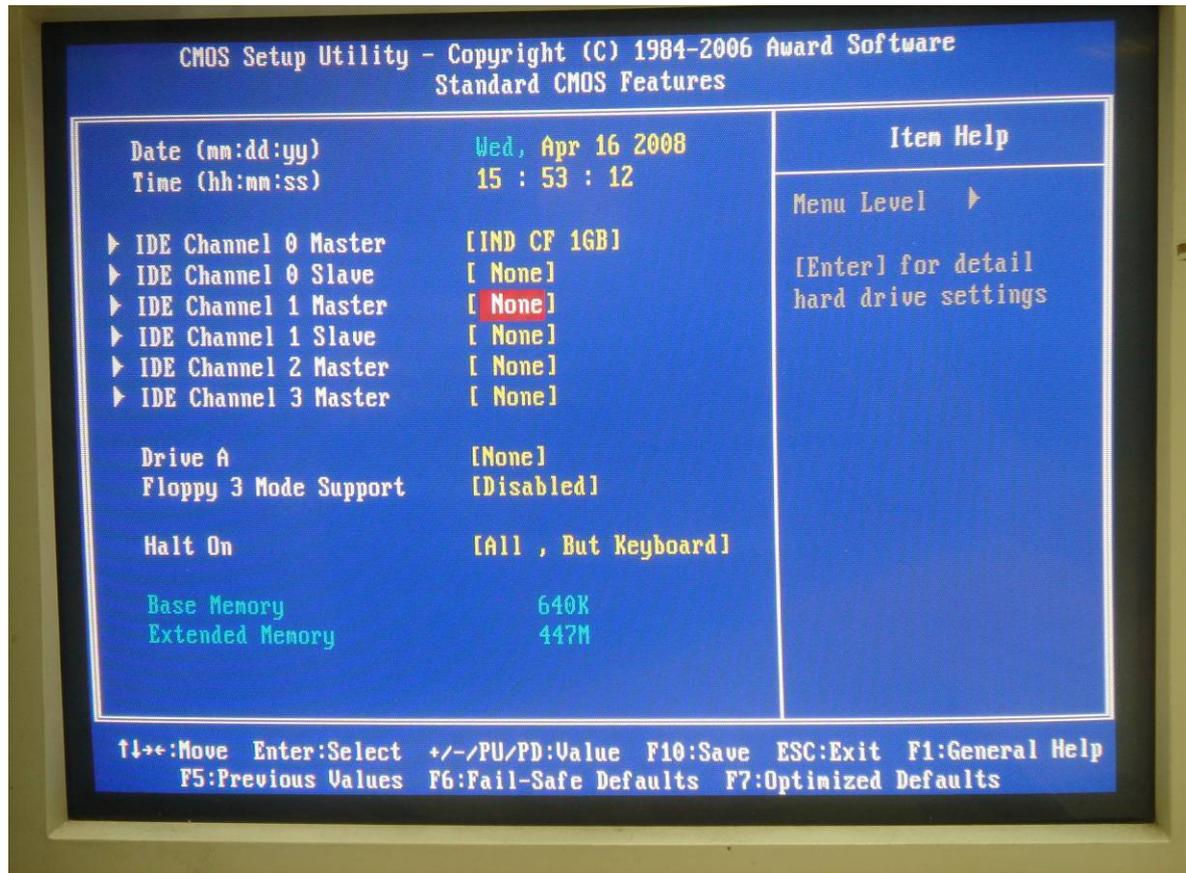

步驟 4


If the card drive located at Primary Master, must be make sure to set "IDE Channel 1 Master" as "None"

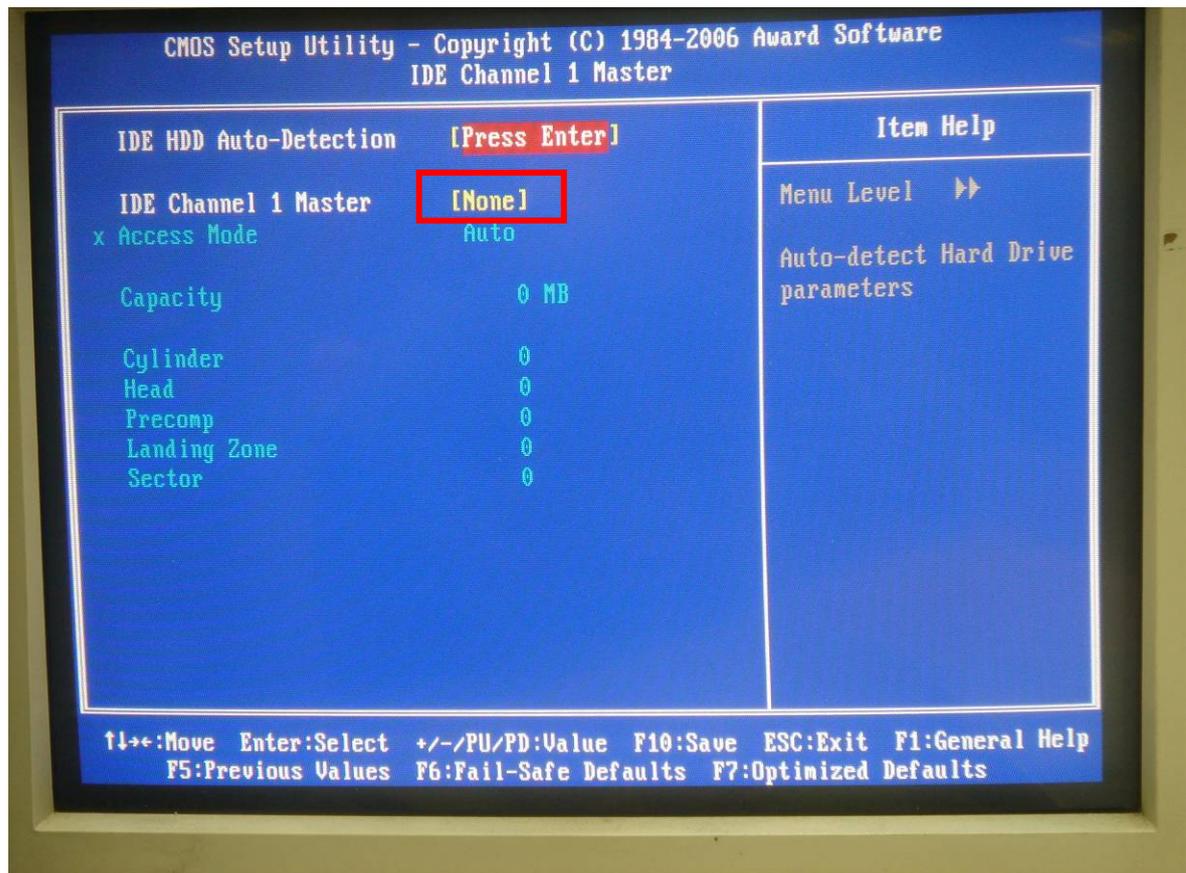

Step 5.

To edit "config.sys" by DOS command,

1. Input "**device=xxx_x.sys**" (Depends on the location of card drive)
2. Ppress "**F6**" to save the file.

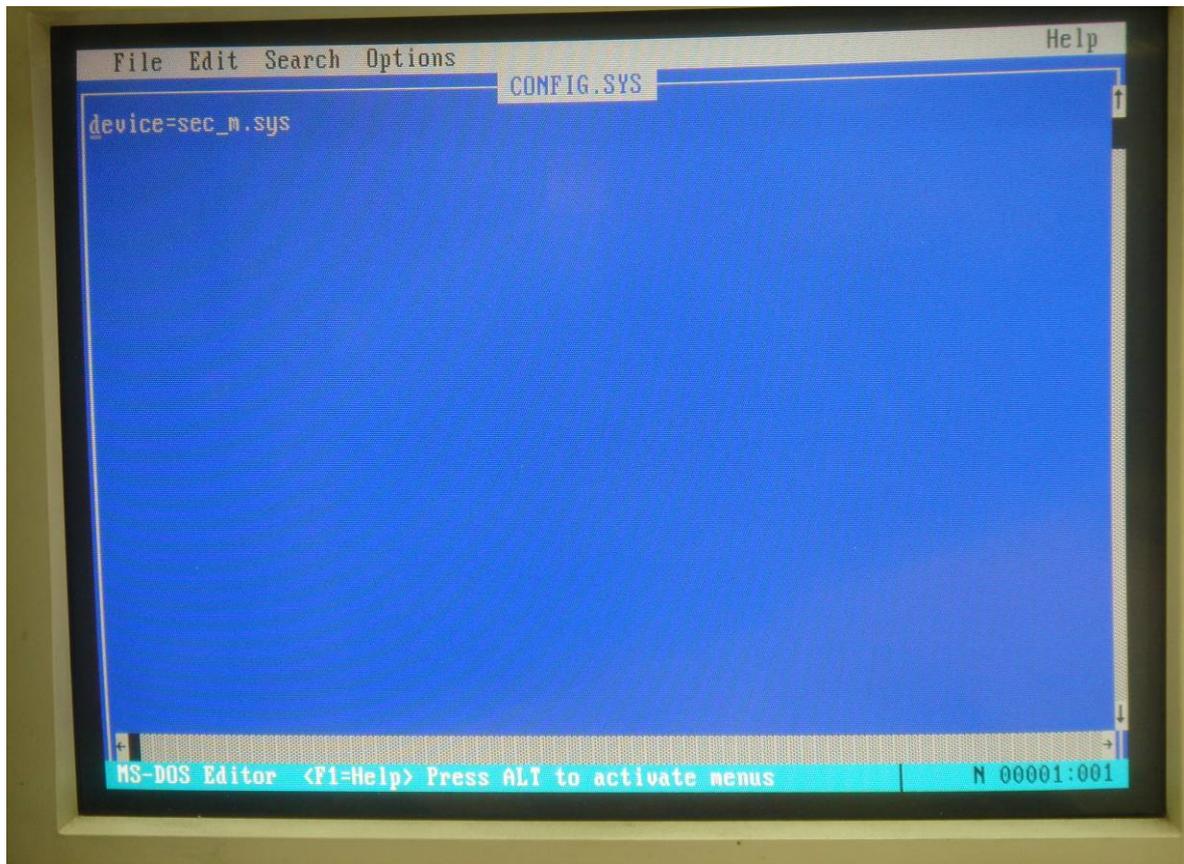

Step 6.

Inserting the CF Card into R312XX00I50XBH03R after rebooting, please input "D:" to make sure the Hot Swap function is available.

